



**KIESELMANN**  
FLUID PROCESS GROUP

Translation of the original

## Operating instruction

### Double seat valves

Type 568x

DN25 - DN100

OD 1 Inch - OD 4 Inch

Seal material: EPDM, HNBR



**KIESELMANN GmbH**

Paul-Kieselmann-Str. 4-10  
D - 75438 Knittlingen

☎ +49(0) 7043 371-0 • ☎ +49(0) 7043 371-125  
[www.kieselmann.de](http://www.kieselmann.de) • [info@kieselmann.de](mailto:info@kieselmann.de)

---

Copyright: © KIESELMANN FLUID PROCESS GROUP

## Table of contents

<b>1 General informations .....</b>	<b>4</b>
1.1 Informations for your safety .....	4
1.2 Marking of security instructions.....	4
1.3 General designated use .....	4
1.4 Personnel .....	4
1.5 Modifications, spare parts, accessories .....	5
1.6 General instructions .....	5
<b>2 Safety instructions.....</b>	<b>6</b>
2.1 Intended use .....	6
2.2 General notes.....	6
2.3 General safety instructions.....	6
<b>3 Delivery, transport and storage .....</b>	<b>8</b>
3.1 Delivery.....	8
3.2 Transport.....	8
3.3 Storage .....	8
<b>4 Function and operation .....</b>	<b>9</b>
4.1 Description of function.....	9
4.2 Control system and position indicator.....	9
4.3 Pneumatic valve activation.....	10
<b>5 Commissioning, service and maintenance .....</b>	<b>11</b>
5.1 Commissioning.....	11
5.1.1 Installation instructions.....	11
5.1.2 General welding guidelines .....	11
5.1.3 ATEX - Guidelines .....	11
5.2 Service.....	12
5.2.1 Maintenance table.....	12
5.3 Cleaning .....	12
<b>6 Technical data .....</b>	<b>13</b>
6.1 Double seat valve Type 568x .....	13
6.2 KV - value .....	13
6.3 Cleaning flow rate.....	14
6.4 Torques .....	14
<b>7 Disassembly and assembly .....</b>	<b>15</b>
7.1 Disassembly.....	15
7.1.1 Assembly valve insert VE .....	16
7.1.2 Replacement wear parts .....	16
7.2 Assembly .....	20
7.2.1 Seals (D4).....	23
7.2.2 Shaft sealing .....	24
<b>8 Drawings and dimensions .....</b>	<b>25</b>
8.1 Double seat valve .....	25
8.1.1 Valve insert (VE) DN 25 .....	26
8.1.2 Valve insert (VE) DN 40 - DN 65.....	27
8.1.3 Lantern with rinsing connection .....	28
8.1.4 Control units.....	28
8.1.5 Dimensions .....	30
<b>9 Wearing parts .....</b>	<b>31</b>
9.1 Double seat valve Type 568x DN25 / OD 1 Inch.....	31
9.2 Double seat valve Type 568x DN40 - DN150 / 1,5" - 4" .....	34
<b>10 Classification.....</b>	<b>38</b>
10.1 Structure of Order Number .....	38
<b>11 Appendix .....</b>	<b>40</b>
11.1 Declaration of incorporation .....	40

## 1 General informations

### 1.1 Informations for your safety

We are pleased that you have decided for a high-class KIESELMANN product. With correct application and adequate maintenance, our products provide long time and reliable operation.

Before installation and initiation, please carefully read this instruction manual and the security advices contained in it. This guarantees reliable and safe operation of this product and your plant respectively. Please note that an incorrect application of the process components may lead to great material damages and personal injury.

In case of damages caused by non observance of this instruction manual, incorrect initiation, handling or external interference, guarantee and warranty will lapse!

Our products are produced, mounted and tested with high diligence. However, if there is still a reason for complaint, we will naturally try to give you entire satisfaction within the scope of our warranty. We will be at your disposal also after expiration of the warranty. In addition, you will also find all necessary instructions and spare part data for maintenance in this instruction manual. If you don't want to carry out the maintenance by yourself, our KIESELMANN - service team will naturally be at your disposal.

### 1.2 Marking of security instructions

Hints are available in the chapter "safety instructions" or directly before the respective operation instruction. The hints are highlighted with a danger symbol and a signal word. Texts beside these symbols have to be read and adhered to by all means. Please continue with the text and with the handling at the valve only afterwards.

Symbol	Signal word	Meaning
	DANGER	Imminent danger which will result severe personal injury or death.
	WARNING	Imminent danger which may result severe personal injury or death.
	CAUTION	Dangerous situation which may cause slight personal injury or material damages.
	NOTICE	An harmful situation which may result in damages of the product itself or of adjacent vicinity.
	INFORMATION	Marks application hints and other information which is particularly useful.

### 1.3 General designated use

The fitting is designed exclusively for the purposes described below. Using the fitting for purposes other than those mentioned is considered contrary to its designated use. KIESELMANN cannot be held liable for any damage resulting from such use. The risk of such misuse lies entirely with the user. The prerequisite for the reliable and safe operation of the fitting is proper transportation and storage as well as competent installation and assembly. Operating the fitting within the limits of its designated use also involves observing the operating, inspection and maintenance instructions.

### 1.4 Personnel

Personnel entrusted with the operation and maintenance of the tank safety system must have the suitable qualification to carry out their tasks. They must be informed about possible dangers and must understand and observe the safety instructions given in the relevant manual. Only allow qualified personnel to make electrical connections.

## 1.5 Modifications, spare parts, accessories

Unauthorized modifications, additions or conversions which affect the safety of the fitting are not permitted. Safety devices must not be bypassed, removed or made inactive. Only use original spare parts and accessories recommended by the manufacturer.

## 1.6 General instructions

The user is obliged to operate the fitting only when it is in good working order. In addition to the instructions given in the operating manual, please observe the relevant accident prevention regulations, generally accepted safety regulations, regulations effective in the country of installation, working and safety instructions effective in the user's plant.

## 2 Safety instructions

### 2.1 Intended use

Based upon its functions, the double seat valve is suitable for use in the food and beverages, in pharmaceutical, biotechnological and chemical industries. It is used mainly in combinations with several other double seat valves for the purpose of emptying and filling containers with the possibility of connecting several pipes to one tank.

### 2.2 General notes



#### NOTICE - observe the operating instructions

To avoid danger and damage, the fitting must be used in accordance with the safety instructions and technical data contained in the operating instructions.



#### NOTICE

All data are in line with the current state of development. Subject to change as a result of technical progress.

### 2.3 General safety instructions



#### ⚠ WARNING

##### Risk of injury by moving parts

Do not grab into the valve when the actuator is pressurized. Limbs can be crushing or amputating.

- Remove the control air line before dismantling.
- Ensure that the actuator is unpressurized.



#### ⚠ WARNING

##### Risk of injury by outflowing medium

Dismantling the valve or valve assemblies from the plant can cause injuries.

- Medias flowing through the leakage drain outlet are to be drained off without splashing into a discharge arrangement.
- Carry the disassembling only if when the plant has been rendered pressure-less and free of liquid and gas.



#### ⚠ WARNING

##### Risk of injury by pre-stressed pressure spring.

The actuator is spring-loaded. When disassembling the actuator, components that jump out may cause injuries.

- For dismantling please observe the separate assembly instructions.
- We recommend having the manufacturer do the maintenance work required for the actuation.



#### ⚠ WARNING

##### ATEX - Guidelines

If the valve or the plant is operated in a potentially explosive atmosphere, the valid ATEX directive of the EC and the installation instructions in this operating manual must be observed.

**⚠ CAUTION**

When mounting the clamps, the max. torque must not be exceeded.  
(see technical data)

**⚠ CAUTION**

To avoid air leaking, only use pneumatic connection parts that have an O-ring seal facing the even surface.

**⚠ CAUTION**

Before starting the system, the entire pipeline system must be thoroughly cleaned.

**⚠ CAUTION**

Steps should be taken to ensure that no external forces are exerted on the fitting.

## 3 Delivery, transport and storage

### 3.1 Delivery

- Immediately after receipt check the delivery for completeness and transport damages.
- Remove the packaging from the product.
- Retain packaging material, or expose of according to local regulations.

### 3.2 Transport



#### ⚠ CAUTION

##### Risk of injury and damage to the product

During the transport the generally acknowledged rules of technology, the national accident prevention regulations and company internal work and safety regulations must be observed.

### 3.3 Storage



#### NOTICE

##### Damage to the product due to improper storage!

Observe storage instructions  
avoid a prolonged storage



#### INFORMATION


##### Recommendation for longer storage

We recommend regularly checking the product and the prevailing storage conditions during long storage times.

- To avoid damage to seals and bearings,
  - products up to DN 125 / OD 5 inch should be stored horizontally for maximum 6 months.
  - products larger than DN 125 / 5 inch, should be stored in the upright position with the actuator on top.
- Don't store any objects on the products.
- Protect the products for wetness, dust and dirt.
- The product should be stored in a dry and well ventilated room at a constant temperature (optimal indoor temperature: 25 °C ±5 ; indoor humidity data 70% ±5%).
- Protect seals, bearings and plastic parts for UV light and ozone.

## 4 Function and operation

### 4.1 Description of function

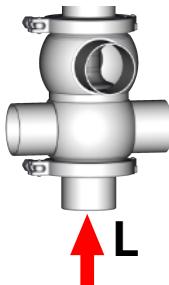

The valve opens from the top down by means of control air and closes bottom to top by means of spring tension without loss of product. In the closed setting, mix-proof separation of the media flowing in the upper and lower valve chambers is ensured by two independently closed valve plates. Any leaks occurring due to damaged valve plate seals are drained to the exterior without pressure via the leakage discharge (L).

### 4.2 Control system and position indicator



#### Feedback unit -optional-

Optionally, modular valve control head systems can be installed to the actuator for reading and actuating valve positions. The standard version is a closed system with SPS or ASI-bus switch-on electronics, and integrated 3/2-way solenoid valves. For tough operating conditions we recommend employing a high-grade steel cover.





#### Feedback unit with finger guard -optional-

For the acquisition of the valve positions over inductive initiators (Sensors), a feedback unit is mounted on the actuation. The enquiry takes place over the position of the piston rod.

### 4.3 Pneumatic valve activation

Valve functions	Pneum. activation via control head with solenoid valves (MV)	Pneum. activation via external Solenoid valves (MV external)
main lift valve "OPEN"	Control supply air P - MV1 - P1/LA1	Control supply air ext.MV1 - LA1
main lift valve "CLOSE"	Ventilation P1/LA1 - MV1 - R valve is closing by spring	Ventilation LA1 - ext.MV1 valve is closing by spring
lifting lower seat	OPEN = control air feed P - MV2 - P2/LA2	OPEN = control air feed ext.MV2 - P - LA2
	CLOSE = de-aeration P2/LA2 - MV2 - R valve is closing by spring	CLOSE = de-aeration LA2 - P - ext.MV2 valve is closing by spring
Lifting upper seat	OPEN = control air feed P - MV3 - P3/LA3	OPEN = control air feed ext.MV3 - LA3
	CLOSE = de-aeration P3/LA3 - MV3 - R valve is closing by spring	CLOSE = de-aeration LA3 - ext.MV3 valve is closing by spring

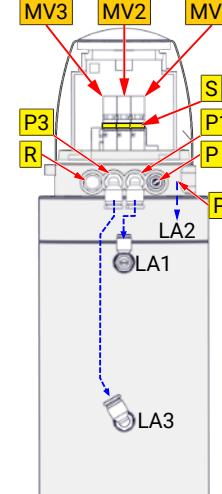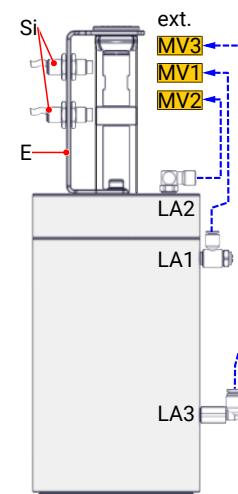	control unit and solenoid valves	external pneum. activation
<p>MV = Solenoid valve  MV1 = main stroke valve open  MV2 = lifting lower seat  MV3 = lifting upper seat  R = Ventilation silencer  P = Supply air connection  LA = Air connection  S = Slide switch for manual operation of the solenoid valves  Si = Sensors M12x1  E = mounting kit for feedback unit</p>  		

## 5 Commissioning, service and maintenance

### 5.1 Commissioning



#### NOTICE

##### Checking the solenoid valves in the control head

Before using the valve for the first time, the function of the solenoid valves in the control head must be checked.

- Remove the hood on control head.
- Connect the supply air to the control head
- Check the valve functions using the slide switches on the solenoid valve

⇒ Please also read the [documentation for control heads!](#)

#### 5.1.1 Installation instructions

##### Fitting position

The valve must be installed vertically with the actuator at the upwards. Liquid must be able to flow freely from the valve housing.

#### 5.1.2 General welding guidelines

Sealing elements integrated in weld components must generally be removed prior to welding. To prevent damage, welding should be undertaken by certified personnel (EN ISO 9606-1). Use the TIG (Tungsten Inert Gas) welding process.



#### ⚠ CAUTION

##### Damage and injuries due to high temperature supply

To avoid a distortion of the components, all welding parts must be welded to stress-relieved.  
Allow all components to cool before assembling.



#### NOTICE

##### Damage due to impurities

Impurities can cause damage to the seals and seals area.  
Clean inside areas prior to assembly.

#### 5.1.3 ATEX - Guidelines

For valves or plants/installations that are operated in the ATEX area, sufficient bonding (grounding) must be ensured (see valid ATEX Guidelines EG).

## 5.2 Service



### RECOMMENDATION

#### Replacement of seals

To achieve optimal maintenance cycles, the following points must be observed!

- When replacement of seals, all product-contacting seals should be replaced.
- Only original spare parts may be installed.

#### Maintenance interval

The maintenance intervals depend on the operating conditions "temperature, temperature-intervals, medium, cleaning medium, pressure and opening frequency". We recommend replacing the seals 1-year cycle. The user, however should establish appropriate maintenance intervals according to the condition of the seals.

#### Lubricant recommendation

	EPDM; HNBR; NBR; FKM; k-flex	- Klüber Paraliq GTE703*
	Silicone	- Klüber Sintheso pro AA2*
	Thread	- Interflon Food*
*) It is only permitted to use approved lubricants, if the respective fitting is used for the production of food or drink. Please observe the relevant safety data sheets of the manufacturers of lubricants.		

#### Maintenance - Lift actuator

The actuator is maintenance-free and non-removable.

##### 5.2.1 Maintenance table

		Annually	Additional information
5.2 Service	1		

1 - Maintenance personnel

## 5.3 Cleaning

#### Cleaning

Cleaning of the housing is performed with the pipe cleaning system. As part of the cleaning program, the leakage chamber and the drain pipe can be cleaned by cycling the valve discs. The valve disc shaft is also cleaned when the upper valve disc is cycled.

Alternatively, the leakage chamber and the shaft of the upper valve disc can be cleaned by means of the external rinsing connection (Sp). For cleaning the shaft, the upper valve disc has to be lifted.

## 6 Technical data

### 6.1 Double seat valve Type 568x

Model	Double seat valve	
Size	DIN: DN25 - DN100 Inch: OD1 - OD4	
Connection type	Weld-on end DIN EN 10357	
Temperature range	Ambient temperature: (air)	+4°C to +45°C
	Operating temperature: (depends on medium)	+4°C to +95°C
	Sterilisation temperature: (SIP 30 min)	EPDM +140°C HNBR +120°C
Operating pressure	DN 25 - DN 100 = max. 10 bar OD 1 - OD 4 = max. 10 bar	
Pressure resistance	40 bar	
Leakage rate	A (DIN EN 12266-1)	
Control air	Control air pressure: Control air quality:	5,5 - 8,0 bar ISO 8573-1 : 2001 quality class 3
Material (in contact with product)	Stainless steel:	1.4404 / AISI 316L
	Surface:	Ra ≤ 0,8µm, e-polished
	Sealing material:	EPDM (FDA) HNBR (FDA)

### 6.2 KV - value

ND	25	40	50	65	80	100	125	150
Inch	1	1½	2	2½	3	4	5	6
flow direction:	[m³/h]							
transition-flow at top↔	26	50	95	150	240	380	580	940
transition-flow at bottom ↔	26	55	100	155	250	390	590	940
from bottom to top ↑	16	26	45	72	98	155	245	370
from top to bottom ↓	16	24	43	67	93	150	240	330

### 6.3 Cleaning flow rate

Cleaning parameters for the leakage chamber			Nominal diameter DN / OD							
Cleaning step	valve disc lifting	DIN Inch	25 1	40 1½	50 2	65 2½	80 3	100 4	125 -	150 -
Pre-Rinse	-	lifting upper seat	0.97	1.10	1.1	1.38	1.66	2.08	2.50	4.02
Wash 80°C	3 x 5 sec.									
Intermediate rinse	2 x 5 sec.		(l/s at 3bar)							
Acid	3 x 5 sec.	lifting lower seat	0.54	0.69	0.69	0.83	0.83	1.25	1.66	2.50
Final rinse	2 x 5 sec.									

### 6.4 Torques

ND Inch	25 1	40 1½	50 2	65 2½	80 3	100 4	125 5	150 6
Clamp coupling (Nm):	15	15	15	25	25	55	65	65

## 7 Disassembly and assembly

### 7.1 Disassembly



#### NOTICE

All threaded joint have right-hand thread.


Unscrew and remove control air, steam resp. cleaning lines and electrical lines, complete feedback unit or control head.

#### Mounting tools

		Mounting tools sets:	DN40 - DN65	5670 065 100-000			
			DN80 - DN100	5670 100 100-000			
			DN125 - DN150	5670 150 100-000			
M1		Socket	DN40 - DN65	5620 065 131-130			
			DN80 - DN150	5620 100 131-130			
M2		Eccentric socket	DN40 - DN65	5620 065 134-130			
			DN80 - DN150	5620 100 134-130			
M3		Centring ring	DN40/50	5620 050 025-020			
			DN65	5620 065 025-020			
			DN80	5620 080 025-020			
			DN100	5620 100 025-020			
			DN125	5620 125 025-020			
			DN150	5620 150 025-020			
M4		Joint -pin wrench	DN40 - DN65	5620 065 015-000			
			DN80 - DN150	5620 150 015-000			
M5		Socket + guide bush (POM) + O-rings	DN40 - DN65	5670 080 105-000			
			DN80 - DN100	5670 100 105-000			
			DN125 - DN150	5670 150 105-000			
M6		Mounting plate	DN40 - DN65	5620 065 121-020			
			DN80 - DN100	5620 100 121-020			
			DN125 - DN150	5620 150 121-020			
ST1 6		Mounting wrench	DN40 - DN150	5670 150 126-020			

### 7.1.1 Assembly valve insert VE


- Unscrew the upper retaining clamp (VK).
- Connect compressed air to LA1 and pressurize the actuator with air.
  - The valve insert lift up of the valve housing (VG).
- Pinch a rubber (T) between the Lantern (15) and the housing (VG).
- Disconnect compressed air at LA1 and de-pressurize the drive - The valve piston move in. - The valve piston move in.
- Remove the complete valve insert with the upper shaft seal (D1) from the housing (VG).
- Unscrew the lower retaining clamp (VK).
- Remove the housing bottom (1) with the lower shaft seal (D1) from the housing (VG).

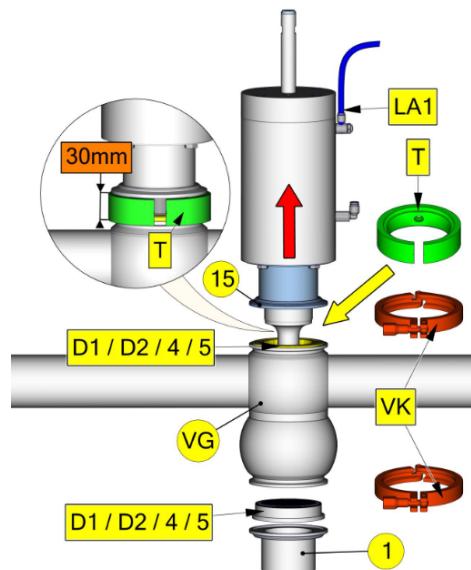


### 7.1.2 Replacement wear parts

#### Disassembly

- Unscrew nut (11) and remove disc (10).
- Dismount the upper piston (6) from the upper piston (7) in direction X.
- Remove the split washer (13).

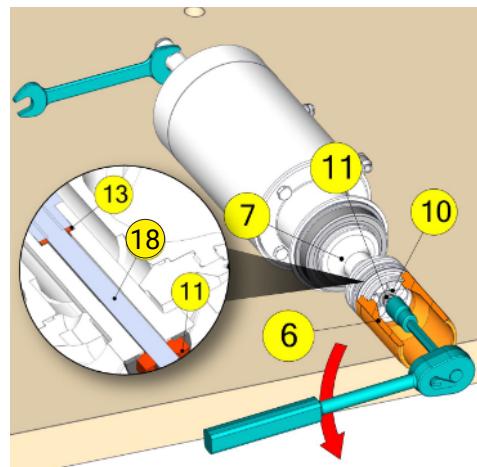


- Remove O-ring (D5).
- Unscrew the hexagon screws (14).
- Push the lantern (15) in direction 'X' until the hole (B1) is freely visible.

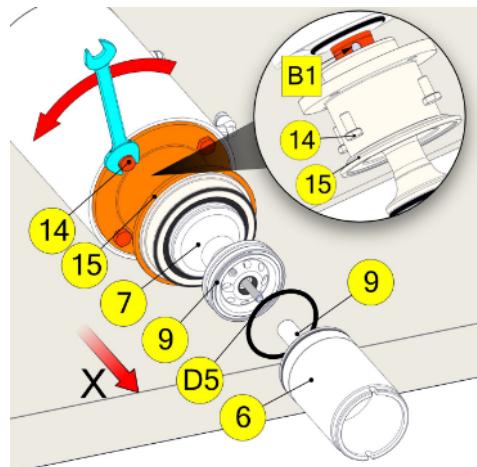


- Unscrew the upper piston (7) from piston rod (3). Use the mounting plate M6.


Counter with the pin wrench M4 at the hole (B1).

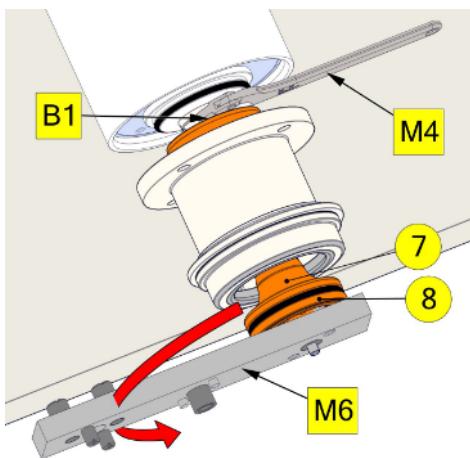


- $\geq 40 / 1\frac{1}{2}$  (valves with divided pistons):  
Should be untighten the piston plate (8) before piston (7), then unscrew the piston (7) with the eccentric M2 and a ratchet.

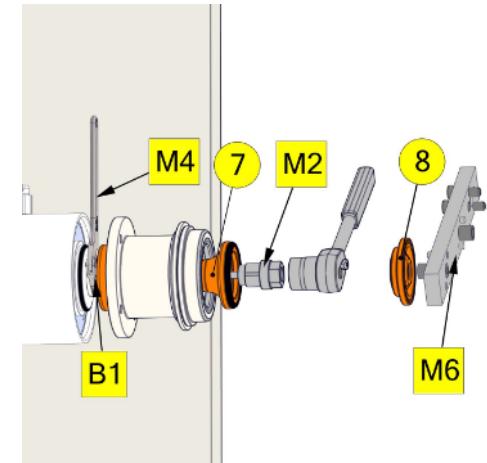

- Push the lantern (15) and the upper shaft seal (D1) from the piston (7).
- Dismount the valve lift stop (16).
- Remove seals: Pos. (D1); (D7); (D8); (D9).

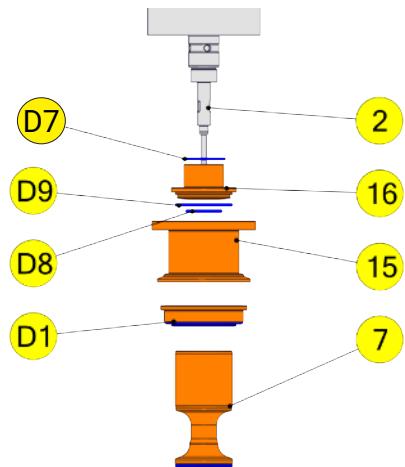

### 7.1.2.1 Assembly seal (D4)

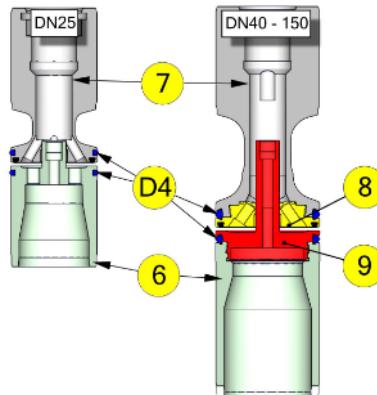


Model Seal (D4)	Piston (6) and (7)	Pair of piston upper (7) and (8) Pair of piston lower (6) and (9)
DN 25	DN 40 - 125	DN 150
OD 1"	OD 1½" - 5"	OD 6"
Piston <u>undivided divided</u> <sup>1</sup>	Piston divided	Piston divided
O-ring	X	X
Seal (with Support ring)	-	X

<sup>1</sup>)According their construction from valve size DN 25/1", the pistons (6) and (7) are not divided.


#### DN25 Dismount (D4) (O-ring version, Piston not divided)

- Puncture the O-ring (D4) with a needle and remove them from the groove of piston (6) and (7).

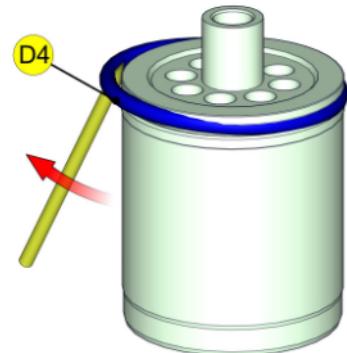


#### DN40 - DN150 Dismount O-ring / seal (D4)

- Clamp the mounting plate M6 into the vice.
- Put the piston (6) resp. (7) in the fitting pins. (see Fig. 5 - 8).
- Unscrew the piston (6) from piston plate (9) with the socket M5 and the mating reducing bush.
- Unscrew the piston (7) from piston plate (8) with the socket M1.

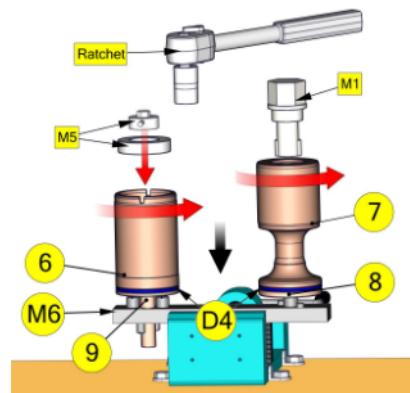

- Remove seals resp. O-rings (D4).

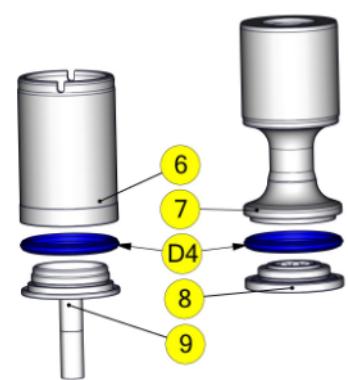

## 7.2 Assembly

Assemble in reverse order.

Thoroughly clean and slightly lubricate mounting areas and running surfaces.



### NOTICE



**During assembly, the following points must be observed!**

Folgen

- Always replace the hexagon lock nut (11) by a new one after unscrewing.
- Carefully fit in the complete valve insert into the casing. When fitting the valve insert and running surfaces onto the piston, do not damage.
- - Check valve functions by manually activating the 3/2-way solenoid valves after assembly!

#### Mounting clamp coupling (VK)

- For mounting the clamp coupling (VK), please note that it continuously fits form locking to the inclinations of the casing and the lantern/casing bottom.
- The centring of the retaining clamp (VK) during tightening can be accomplished with a slight beat (please use a soft-head hammer) on the extent of the retaining clamp (VK).
- Beim Anziehen der Verschlussklammer (VK) muss das Drehmoment und die Spaltgröße 'S' (When tightening the clamp coupling (VK), please pay attention to the turning moment and the gap size 'S' ( $\leq 0,4\text{mm}$ ) between casing and lantern/casing bottom.

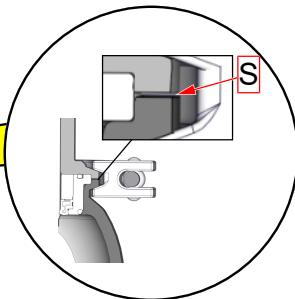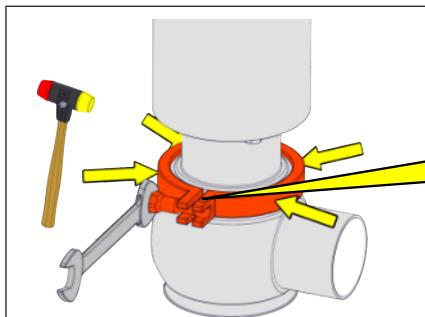


ND	25	40	50	65	80	100	125	150
Inch	1	1½	2	2½	3	4	5	6
<b>Clamp coupling (Nm):</b>	15	15	15	25	25	55	65	65

### Mounting seal (D4) for divided piston


Pair of piston lower = Piston (6) and piston plate (9)

Pair of piston upper = Piston (7) and piston plate (8)


- Screw together the pair of piston (7) / (8) and (6) / (9) without the seal (D4) to the metal limit stop by hand.
- Make a colored mark at the piston surfaces.
- After then, unscrew the pairs of piston again.

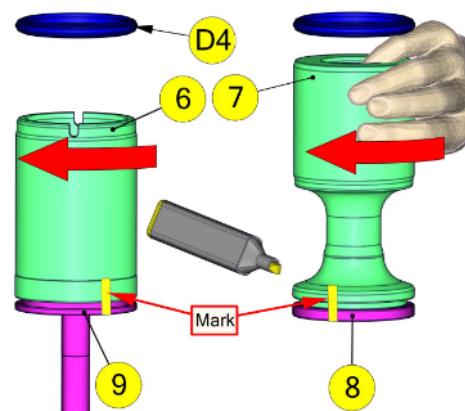

- Slide the seal (D4) onto the pistons.
- Screw together the pair of piston by hand again.
- Clamp the mounting plate M6 into the vice.
- Fix the lower pair of piston (6) / (9) with the piston plate (9) in the mounting plate.
- Position the eccentric ring (M3) on seal (D4).
- Screw up the piston (6) to the final limit mark. Use the socket M5 and a ratchet.

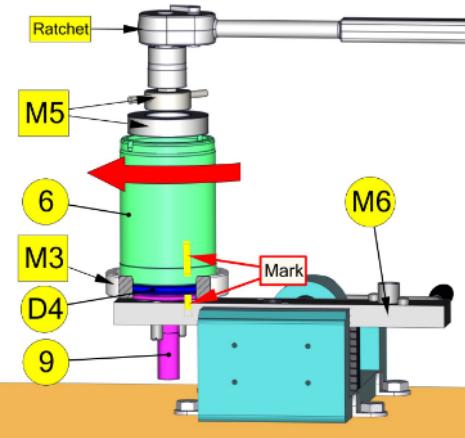


- Clamp the socket M1 into the vice at the hexagon flat. Fix the upper pair of piston (7) / (8) with the piston (7) of the socket M1.
- Fix the upper pair of piston (7) / (8) with the piston (7) of the socket M1.
- Position the eccentric ring (M3) on seal (D4).
- Screw up the piston plate (8) to the final limit mark. Use the mounting plate M6.

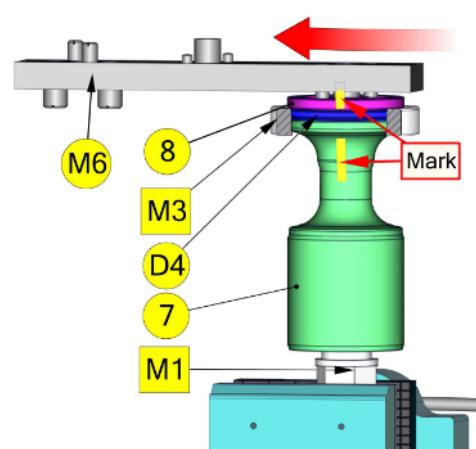

**Mounting O-ring (D4) for undivided piston**

- Slide the O-ring onto the groove.  
Resolve contingently twisting of the seal with a rod between seal and groove.
- Alternately press and roll the seal into the groove with round body.

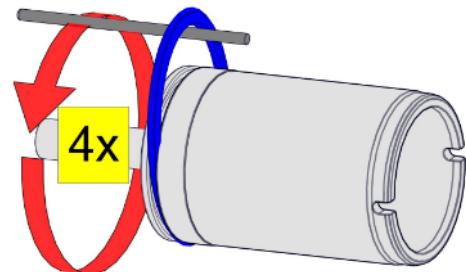

### 7.2.1 Seals (D4)

#### Seal D4 - Elastomer

Model Seal (D4)	Piston (6) and (7)	Pair of piston upper (7) and (8)	
	DN 25 OD 1"	DN 40 - 125 OD 1½" - 5"	DN 150 OD 6"
	Piston <u>not divided</u> <sup>1</sup>	Piston divided	Piston divided
O-ring EPDM	x	x <sup>2</sup>	x
O-ring HNBR	x	x <sup>3</sup>	x
Seal EPDM (with Support ring)	-	x	-
Seal HNBR (with Support ring)	-	x	-

1. According their construction from valve size DN 25/1", the pistons (6) and (7) are not divided.
2. O-ring version till 05/2016 thereafter seal EPDM (D4)c
3. O-ring version till 05/2016 thereafter seal (D4)d

Seal - Model	
D4 = Seal	
D4-1 = Seal jacket (seal material)	
D4-2 = Backup ring	
D4 = O-ring	

## 7.2.2 Shaft sealing

### Shaft sealing - Elastomer


#### Shaft seal Elastomer

D1 = Shaft seal

D2 = O-rings


4 = Bearing bush

5 = Housing insert

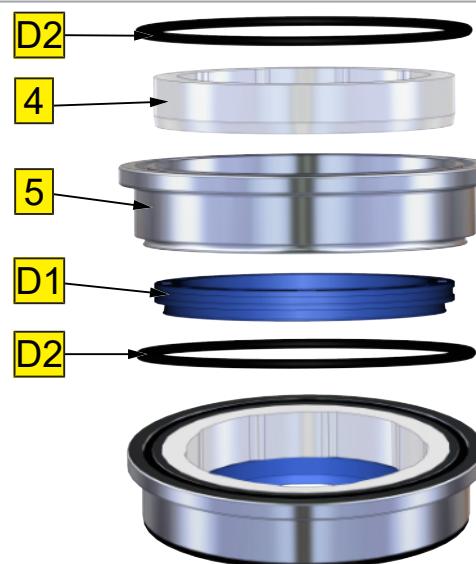


## 8 Drawings and dimensions

### 8.1 Double seat valve

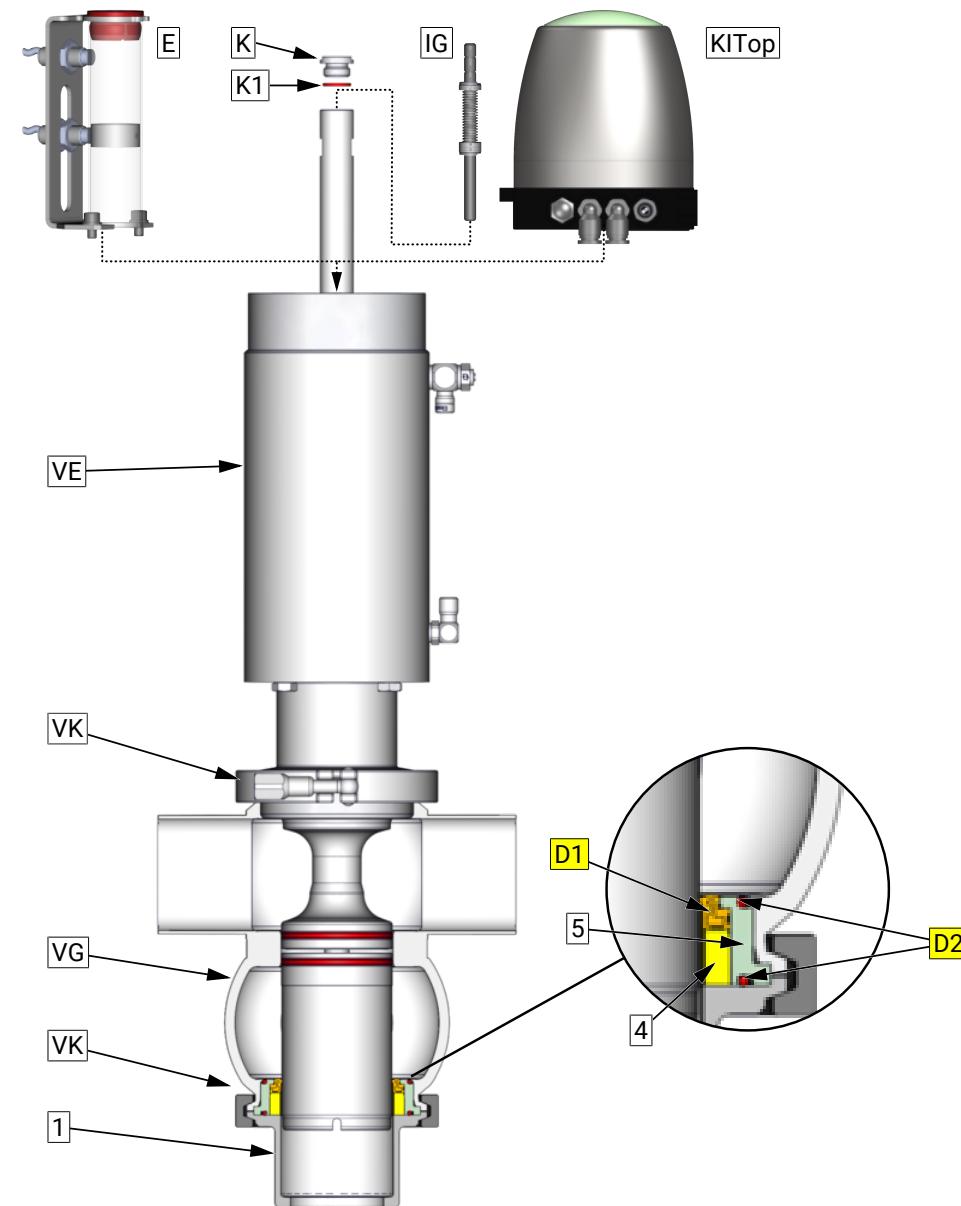


1	Housing bottom	4	Bearing bush
5	Housing insert	D1	Shaft seal
D2	O-ring	K1	O-ring
E	feedback unit	IG	Pulse generator
K	Cap	KITop	Control Head
VE	Valve insert	VG	Valve housing
VK	Locking clip		

### 8.1.1 Valve insert (VE) DN 25

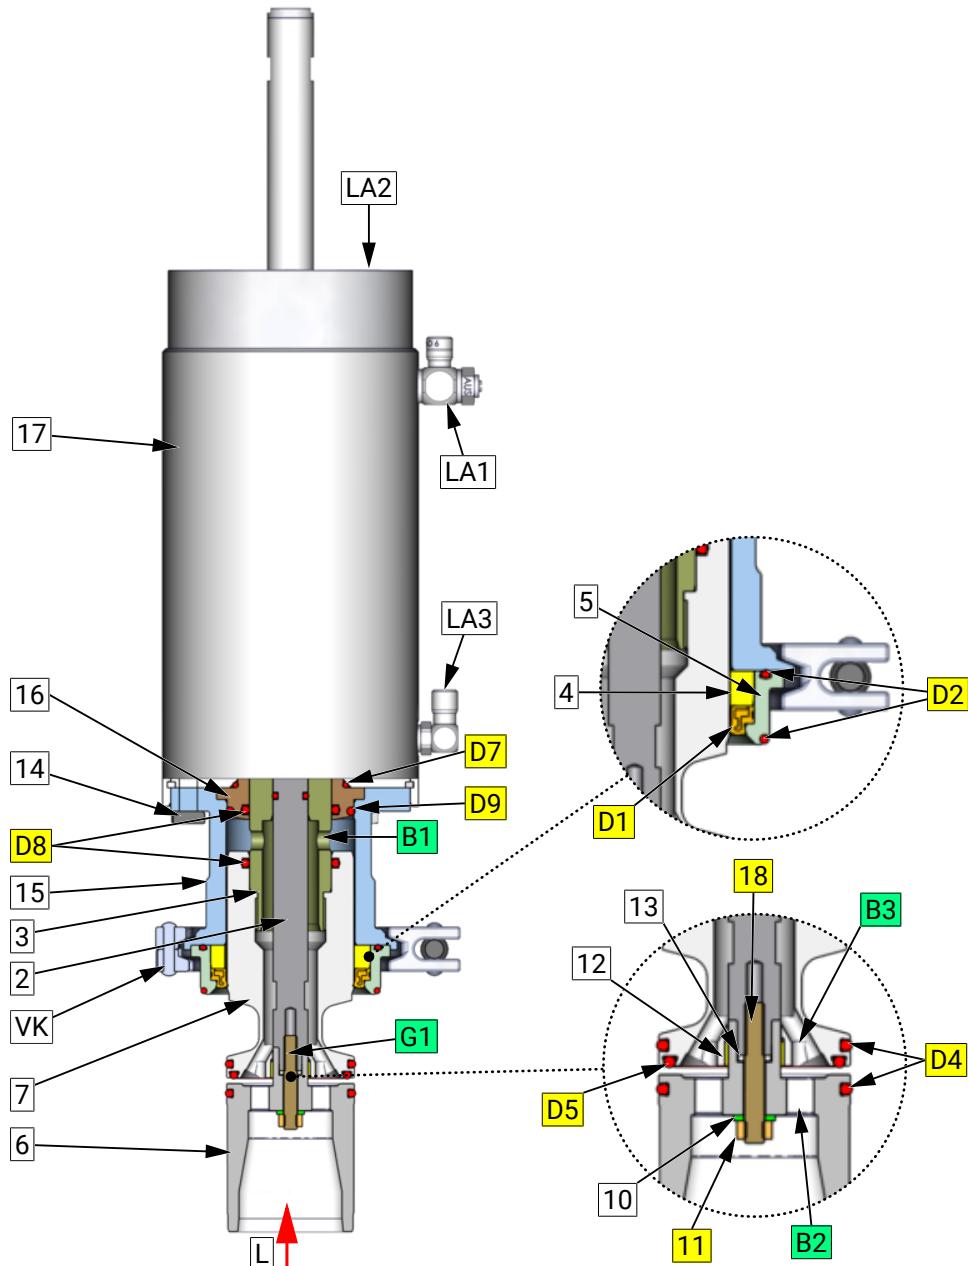


2	Spindle	3	Piston rod
4	Bearing bush	5	Housing insert
6	Piston lower	7	Piston upper
8	-	9	-
10	Washer	11	Hexagon nut
12	Slide bearing	13	Split washer
14	Screw	15	Lantern
16	Valve lift stop	17	pneum. Drive
18	Headless pin	B1	Thread connection
B2	Mounting hole	B3	Mounting hole
D1	Shaft seal	D2	O-ring
D3	-	D4	Seal
D5	O-ring	D6	-
D7	O-ring	D8	O-ring
D9	O-ring	G1	Thread connection
LA1	Air connection	LA2	Air connection
LA3	Air connection	L	Leakage drain

### 8.1.2 Valve insert (VE) DN 40 - DN 65

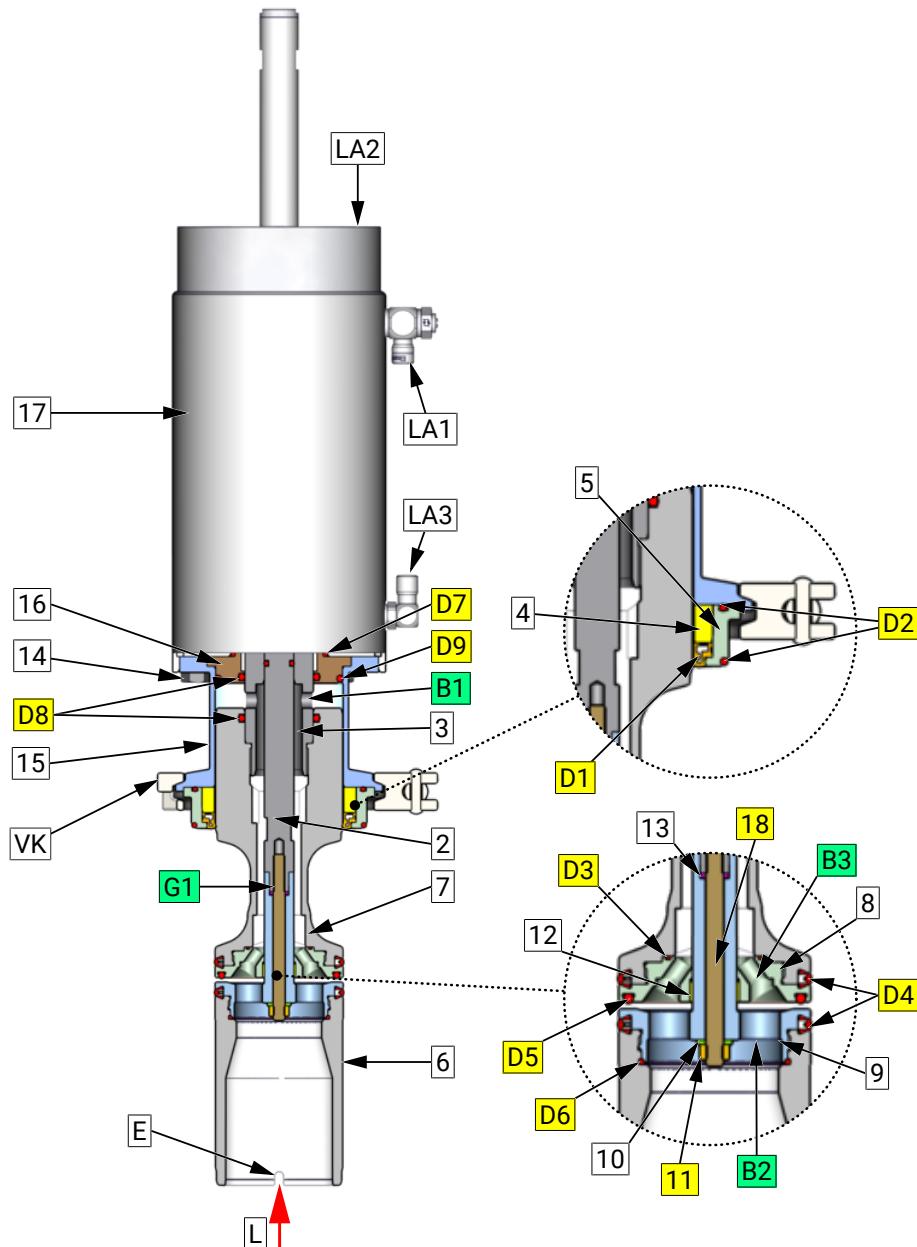

2 Spindle	3 Piston rod
4 Bearing bush	5 Housing insert
6 Piston lower	7 Piston upper
8 Piston plate upper	9 Piston plate lower
10 Washer	11 Hexagon nut
12 Slide bearing	13 Split washer
14 Screw	15 Lantern
16 Valve lift stop	17 pneum. Drive
18 Headless pin	B1 Thread connection
B2 Mounting hole	B3 Mounting hole
D1 Shaft seal	D2 O-ring
D3 O-ring	D4 Seal
D5 O-ring	D6 O-ring
D7 O-ring	D8 O-ring
D9 O-ring	E Groove
G1 Thread connection	LA1 Air connection
LA2 Air connection	LA3 Air connection
L Leakage drain	

### 8.1.3 Lantern with rinsing connection

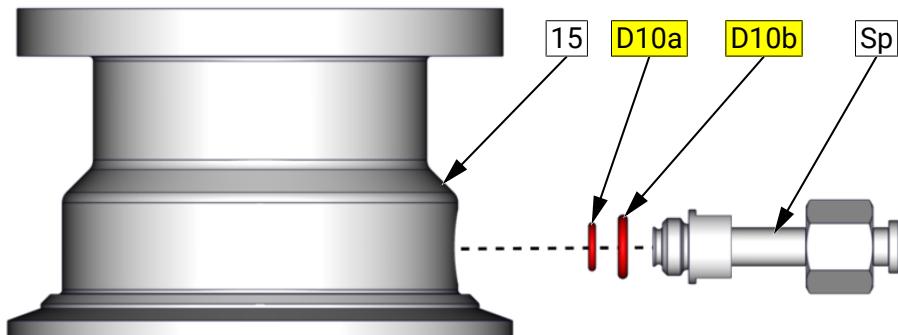


15 Lantern  
D10b O-ring

D10a O-ring  
Sp Rinsing connection

### 8.1.4 Control units


Control head KI-TOP	
with plastic hood - transparent	with stainless steel hood
Feedback unit with finger guard (E)	
<ul style="list-style-type: none"> <li>E1 = Cap</li> <li>E2 = Angle bracket</li> <li>E3 = Shell transparent</li> <li>E4 = Set collar</li> <li>E5 = Headless pin</li> <li>E6 = Allen screw</li> <li>E7 = Flat washer</li> </ul>	

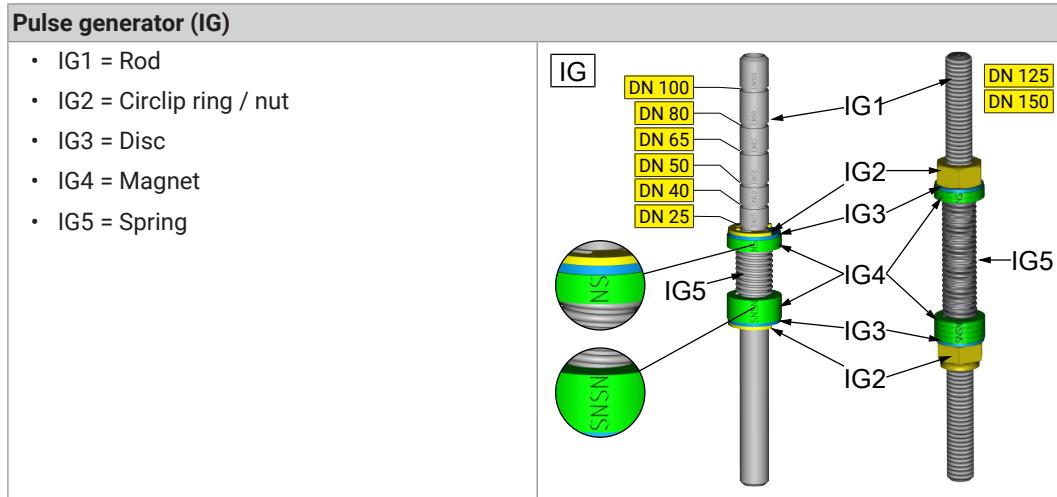

### 8.1.5 Dimensions

	DIN Inch	25 1	40 1½	50 2	65 2½	80 3	100 4
D1 / D2	DIN Inch	Ø29x1,5 Ø25,4x1,65	Ø41x1,5 Ø38,1x1,65	Ø53x1,5 Ø50,8x1,65	Ø70x2 Ø63,5x1,65	Ø85x2 Ø76,2x1,65	Ø104x2 Ø101,6x2
D3	-	Ø 110	Ø 110	Ø 110	Ø 135	Ø 135	Ø 135
L1	-	150	170	170	210	230	260
L2	DIN Inch	112 112	132 127,5	155 152	193 189	228 220	269 260
L3	DIN Inch	46 42	59 56	71 69	87 81	106 98	125 122
L4	-	448	447	446	464	531	560
Sp	-	- Rinsing connection with cutting ring union M12x1 / G1/4					
<b>Size when completed</b>							
M (Valve + KI-Top)	-	580	600	625	680	785	850

Table 1 Measurement schedule

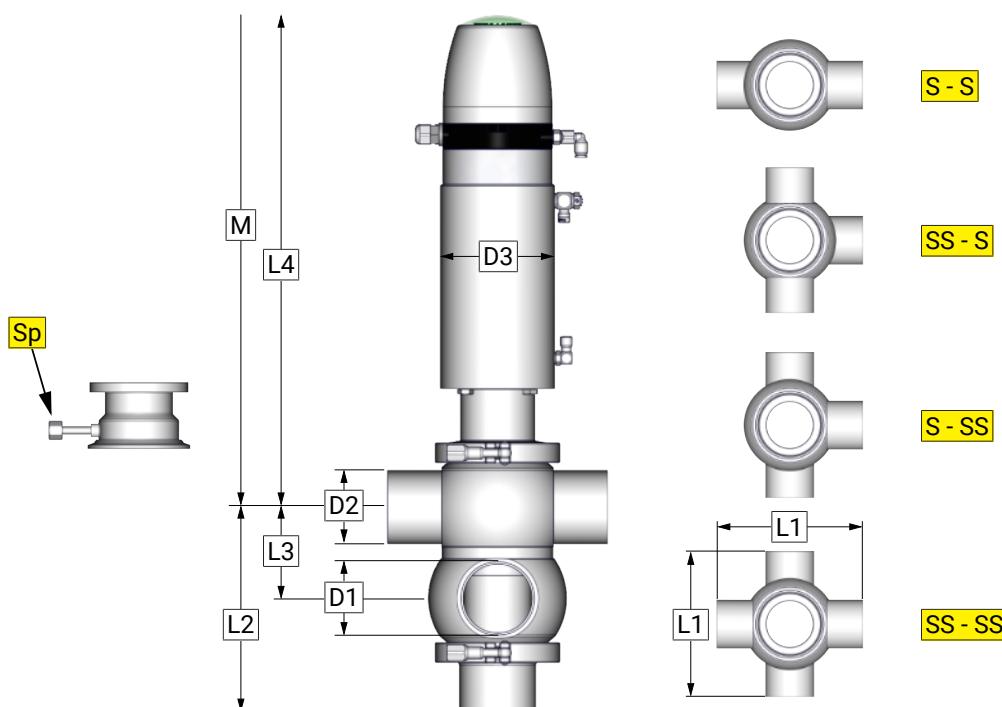

## 9 Wearing parts

### 9.1 Double seat valve Type 568x DN25 / OD 1 Inch

#### Valve inserts and Wear part kits

Housing variation	Seal	Item number	Valve insert VE	Wear parts kit
<b>Standard</b>				
SS - S	EPDM	5681 DN 130 - xxxx	5680 DN 030-041	5670 025 130-000
S - S		5682 DN 130 - xxxx		
S - SS		5683 DN 130 - xxxx		
SS - SS		5684 DN 130 - xxxx		
SS - S	HNBR	5681 DN 420 - xxxx	5680 DN 050-041	5670 025 420-000
S - S		5682 DN 420 - xxxx		
S - SS		5683 DN 420 - xxxx		
SS - SS		5684 DN 420 - xxxx		
SS - S	FKM	5681 DN 140 - xxxx	5680 DN 040-041	5670 025 140-000
S - S		5682 DN 140 - xxxx		
S - SS		5683 DN 140 - xxxx		
SS - SS		5684 DN 140 - xxxx		
<b>ext. rinsing connection upper</b>				
SS - S	EPDM	5681 DN 760 - xxxx	5680 DN 760-041	5680 025 769-000
S - S		5682 DN 760 - xxxx		
S - SS		5683 DN 760 - xxxx		
SS - SS		5684 DN 760 - xxxx		
SS - S	HNBR	5681 DN 770 - xxxx	5680 DN 770-041	5680 025 779-000
S - S		5682 DN 770 - xxxx		
S - SS		5683 DN 770 - xxxx		
SS - SS		5684 DN 770 - xxxx		
SS - S	FKM	5681 DN 780 - xxxx	5680 DN 780-041	5680 025 749-000
S - S		5682 DN 780 - xxxx		
S - SS		5683 DN 780 - xxxx		
SS - SS		5684 DN 780 - xxxx		

DN = Nominal diameter e.g. 5683 025 130-041 = DN 25, 5683 026 130-041 = 1 Inch,

xxxx = Material in product contact / Exterior finish / Control systems (see Classification [▶ 38])

S = Welded end

**Wear parts set EPDM**

Double seat valve DN 25 / OD 1

Item	Designation	Material	DN 25 / OD 1 Inch	WPS	
WPS	Wear parts set EPDM	EPDM	5670 025 130-000	●	●
	Wear parts set EPDM - rinsing connection upper	EPDM	5680 025 769-000		
11	Hexagon nut M6	AISI304	8113 006 000-020	●	●
18	Headless pin M6x40	AISI304	8112 006 040-020	●	●
D1	Shaft seal (2x)	EPDM	5622 050 010-069	●	●
D2	O-ring (4x)	EPDM	2304 069 026-159	●	●
D3	-	-	-	-	-
D4	O-ring (2x)	EPDM	2304 047 035-159	●	●
D5	O-ring	EPDM	2304 041 035-159	●	●
D6	-	-	-	-	-
D7	O-ring	HNBR	2304 042 025-055	●	●
D8	O-ring (2x)	EPDM	2304 036 035-159	●	●
D9	O-ring	EPDM	2304 047 035-159	●	●
D10a	O-ring	EPDM	2304 007 015-159	-	●
D10b	O-ring	NBR	2304 009 020-055	-	●

**Wear parts set HNBR**

Double seat valve DN 25 / OD 1

Item	Designation	Material	DN 25 / OD 1 Inch	WPS	
WPS	Wear parts set HNBR	HNBR	5670 025 420-000	●	●
	Wear parts set HNBR - rinsing connection upper	HNBR	5680 025 779-000		
11	Hexagon nut M6	AISI304	8113 006 000-020	●	●
18	Headless pin M6x40	AISI304	8112 006 040-020	●	●
D1	Shaft seal (2x)	HNBR	5622 050 010-050	●	●
D2	O-ring (4x)	HNBR	2304 069 026-050	●	●
D3	-	-	-	-	-
D4	O-ring (2x)	HNBR	2304 047 035-157	●	●
D5	O-ring	HNBR	2304 041 035-157	●	●
D6	-	-	-	-	-
D7	O-ring	NBR	2304 042 025-055	●	●
D8	O-ring (2x)	EPDM	2304 036 035-159	●	●
D9	O-ring	EPDM	2304 047 035-159	●	●
D10a	O-ring	EPDM	2304 007 015-159	-	●
D10b	O-ring	NBR	2304 009 020-055	-	●

**Wear parts kit FKM**

Double seat valve DN 25 / OD 1

Item	Designation	Material	DN 25 / OD 1 Inch	WPS	
	Wear parts set HNBR	FKM	5670 025 140-000		
WPS	Wear parts set HNBR - rinsing connection upper	FKM	5680 025 749-000		
11	Hexagon nut M6	AISI304	8113 006 000-020		
18	Headless pin M6x40	AISI304	8112 006 040-020		
D1	Shaft seal (2x)	HNBR	5622 050 010-050		
D2	O-ring (4x)	HNBR	2304 069 026-050		
D3	-	-	-	-	-
D4	O-ring (2x)	HNBR	2304 047 035-157		
D5	O-ring	HNBR	2304 041 035-157		
D6	-	-	-	-	-
D7	O-ring	NBR	2304 042 025-055		
D8	O-ring (2x)	EPDM	2304 036 035-159		
D9	O-ring	EPDM	2304 047 035-159		
D10a	O-ring	EPDM	2304 007 015-159	-	
D10b	O-ring	NBR	2304 009 020-055	-	

## 9.2 Double seat valve Type 568x DN40 - DN150 / 1,5" - 4"

### Valve inserts and Wear part kits

Housing variation	Seal	Item number	Valve insert VE	Wear parts kit
<b>Standard</b>				
SS - S	EPDM	<b>5681 DN 730 - xxxx</b>	5680 DN 730-041	a) 5670 DN 739-020 b) 5670 DN 739-000
		<b>5682 DN 730 - xxxx</b>		
		<b>5683 DN 730 - xxxx</b>		= with support ring for (D4)
		<b>5684 DN 730 - xxxx</b>		= without support ring for (D4)
S - S	HNBR	<b>5681 DN 720 - xxxx</b>	5680 DN 720-041	a) 5670 DN 729-020 b) 5670 DN 729-000
		<b>5682 DN 720 - xxxx</b>		
		<b>5683 DN 720 - xxxx</b>		= with support ring for (D4)
		<b>5684 DN 720 - xxxx</b>		= without support ring for (D4)
S - SS	FKM	<b>5681 DN 740 - xxxx</b>	5680 DN 740-041	a) 5670 DN 749-020 b) 5670 DN 749-051
		<b>5682 DN 740 - xxxx</b>		
		<b>5683 DN 740 - xxxx</b>		= with support ring for (D4)
		<b>5684 DN 740 - xxxx</b>		= without support ring for (D4)
<b>ext. rinsing connection upper</b>				
SS - S	EPDM	<b>5681 DN 760 - xxxx</b>	5680 DN 760-041	a) 5680 DN 769-020 b) 5680 DN 769-000
		<b>5682 DN 760 - xxxx</b>		
		<b>5683 DN 760 - xxxx</b>		= with support ring for (D4)
		<b>5684 DN 760 - xxxx</b>		= without support ring for (D4)
S - S	HNBR	<b>5681 DN 770 - xxxx</b>	5680 DN 770-041	a) 5680 DN 779-020 b) 5680 DN 779-000
		<b>5682 DN 770 - xxxx</b>		
		<b>5683 DN 770 - xxxx</b>		= with support ring for (D4)
		<b>5684 DN 770 - xxxx</b>		= without support ring for (D4)
S - SS	FKM	<b>5681 DN 780 - xxxx</b>	5680 DN 780-041	a) 5680 DN 749-020 b) 5680 DN 749-000
		<b>5682 DN 780 - xxxx</b>		
		<b>5683 DN 780 - xxxx</b>		= with support ring for (D4)
		<b>5684 DN 780 - xxxx</b>		= without support ring for (D4)

DN = Nominal diameter e.g. 5683 050 730-041 = DN50 5683 051 730-041 = 2 Inch

xxxx = Material in product contact / Exterior finish / Control systems (Classification [▶ 38])

S = Welded end

**Wear part sets EPDM**

Double seat valve DN 40 - DN 100 / OD 1½ - OD 4

Pos	Designation	Material	DN40 1½Inch	DN50 2Inch	DN65 2½Inch	DN80 3Inch	DN100 4Inch	WPS
<b>Wear parts kit (VTS) EPDM - Standard</b>								
WPS	D4 with support ring	a) EPDM	5670 040 739-020	5670 050 739-020	5670 065 739-020	5670 080 739-020	5670 100 739-020	●
	D4 without support ring	b) EPDM	5670 040 739-000	5670 050 739-000	5670 065 739-000	5670 080 739-000	5670 100 739-000	●
<b>Wear parts set (VTS) EPDM - rinsing connection upper</b>								
WPS	D4 with support ring	a) EPDM	5680 040 769-020	5680 065 769-020	5680 050 769-020	5680 080 769-020	5680 100 769-020	●
	D4 without support ring	b) EPDM	5680 040 769-000	5680 065 769-000	5680 050 769-000	5680 080 769-000	5680 100 769-000	●
11	Hexagon nut	AISI304	8113 006 000-020	8113 006 000-020	8113 006 000-020	8113 008 000-020	8113 008 000-020	● ● ● ●
18	Headless pin	AISI316L	8112 006 050-040	8112 006 060-040	8112 006 085-040	8112 008 050-040	8112 008 085-040	● ● ● ●
D1	Shaft seal (2x) complete	EPDM	5622 050 010-069	5622 050 010-069	5622 065 010-069	5622 080 010-069	5622 100 010-069	● ● ● ●
D2	O-ring (4x)	EPDM	2304 069 026-159	2304 069 026-159	2304 082 026-159	2304 098 035-159	2304 117 035-159	● ● ● ●
D3	O-ring	EPDM	2304 026 015-170	2304 026 015-170	2304 029 015-170	2304 042 020-170	2304 036 020-170	● ● ● ●
D4	Seal (2x) two-parts complete with support ring	EPDM	5621 055 025-084	5621 055 025-084	5621 065 025-084	5621 080 025-084	5621 100 025-084	● ● ● ●
	- Support ring	AISI304L	5621 055 027-020	5621 055 027-020	5621 065 027-020	5621 080 027-020	5621 100 027-020	● - ● -
	- Form Seal	EPDM	5621 055 026-084	5621 055 026-084	5621 065 026-084	5621 080 026-084	5621 100 026-084	● ● ● ●
D5	O-ring	EPDM	2304 041 035-159	2304 041 035-159	2304 050 035-159	2304 066 035-159	2304 085 035-159	● ● ● ●
D6	O-ring	EPDM	2304 038 018-170	2304 038 018-170	2304 048 020-170	2304 057 020-170	2304 076 020-170	● ● ● ●
D7	O-ring	NBR	2304 042 025-055	2304 042 025-055	2304 042 025-055	2304 046 025-055	2304 046 025-055	● ● ● ●
D8	O-ring (2x)	EPDM	2304 036 035-159	2304 036 035-159	2304 036 035-159	2304 041 035-159	2304 041 035-159	● ● ● ●
D9	O-ring	EPDM	2304 047 035-159	2304 047 035-159	2304 057 035-159	2304 069 035-159	2304 092 035-159	● ● ● ●
D10a	O-ring	EPDM	2304 007 015-159					- - ● ●
D10b	O-ring	NBR	2304 009 020-055					- - ● ●

**Wear part sets HNBR**

Double seat valve DN 40 - DN 100 / OD 1½ - OD 4

Pos	Designation	Material	DN40 1½Inch	DN50 2Inch	DN65 2½Inch	DN80 3Inch	DN100 4Inch	WPS
<b>Wear parts kit (VTS) HNBR - Standard</b>								
WPS	D4 with support ring	a) HNBR	5670 040 729-020	5670 050 729-020	5670 065 729-020	5670 080 729-020	5670 100 729-020	●
	D4 without support ring	b) HNBR	5670 040 729-000	5670 050 729-000	5670 065 729-000	5670 080 729-000	5670 100 729-000	●
<b>Wear parts set (VTS) HNBR - rinsing connection upper</b>								
WPS	D4 with support ring	a) HNBR	5680 040 779-020	5680 065 779-020	5680 050 779-020	5680 080 779-020	5680 100 779-020	●
	D4 without support ring	b) HNBR	5680 040 779-000	5680 065 779-000	5680 050 779-000	5680 080 779-000	5680 100 779-000	●
11	Hexagon nut	AISI304	8113 006 000-020	8113 006 000-020	8113 006 000-020	8113 008 000-020	8113 008 000-020	● ● ● ●
18	Headless pin	AISI316L	8112 006 050-040	8112 006 060-040	8112 006 085-040	8112 008 050-040	8112 008 085-040	● ● ● ●
D1	Shaft seal (2x)	HNBR	5622 050 010-050	5622 050 010-050	5622 065 010-050	5622 080 010-050	5622 100 010-050	● ● ● ●
D2	O-ring (4x)	HNBR	2304 069 026-171	2304 069 026-171	2304 082 026-050	2304 098 035-050	2304 117 035-050	● ● ● ●
D3	O-ring	EPDM	2304 026 015-170	2304 026 015-170	2304 029 015-170	2304 042 020-170	2304 036 020-170	● ● ● ●
D4	Seal (2x) two-parts complete with support ring	HNBR	5621 055 025-171	5621 055 025-171	5621 065 025-171	5621 080 025-171	5621 100 025-171	● ● ● ●
	- Support ring	AISI304L	5621 055 027-020	5621 055 027-020	5621 065 027-020	5621 080 027-020	5621 100 027-020	● - ● -
	- Form Seal	HNBR	5621 055 026-171	5621 055 026-171	5621 065 026-171	5621 080 026-171	5621 100 026-171	● ● ● ●
D5	O-ring	HNBR	2304 041 035-157	2304 041 035-157	2304 050 035-157	2304 066 035-157	2304 085 035-157	● ● ● ●
D6	O-ring	EPDM	2304 038 018-170	2304 038 018-170	2304 048 020-170	2304 057 020-170	2304 076 020-170	● ● ● ●
D7	O-ring	NBR	2304 042 025-055	2304 042 025-055	2304 042 025-055	2304 046 025-055	2304 046 025-055	● ● ● ●
D8	O-ring (2x)	EPDM	2304 036 035-159	2304 036 035-159	2304 036 035-159	2304 041 035-159	2304 041 035-159	● ● ● ●
D9	O-ring	EPDM	2304 047 035-159	2304 047 035-159	2304 057 035-159	2304 069 035-159	2304 092 035-159	● ● ● ●
D10a	O-ring	EPDM	2304 007 015-159					- - ● ●
D10b	O-ring	NBR	2304 009 020-055					- - ● ●


**Wear part sets FKM**

Double seat valve DN 40 - DN 100 / OD 1½ - OD 4

Pos	Designation	Material	DN40 1½Inch	DN50 2Inch	DN65 2½Inch	DN80 3Inch	DN100 4Inch	WPS
<b>Wear parts kit (VTS) FKM - Standard</b>								
WPS	D4 with support ring	a) FKM	5670 040 749-020	5670 050 749-020	5670 065 749-020	5670 080 749-020	5670 100 749-020	●
	D4 without support ring	b) FKM	5670 040 749-051	5670 050 749-051	5670 065 749-051	5670 080 749-051	5670 100 749-051	●
<b>Wear parts set (VTS) HNBR - rinsing connection upper</b>								
WPS	D4 with support ring	a) FKM	5680 040 749-020	5680 065 749-020	5680 050 749-020	5680 080 749-020	5680 100 749-020	●
	D4 without support ring	b) FKM	5680 040 749-000	5680 065 749-000	5680 050 749-000	5680 080 749-000	5680 100 749-000	●
11	Hexagon nut	AISI304	8113 006 000-020	8113 006 000-020	8113 006 000-020	8113 008 000-020	8113 008 000-020	● ● ● ●
18	Headless pin	AISI316L	8112 006 050-040	8112 006 060-040	8112 006 085-040	8112 008 050-040	8112 008 085-040	● ● ● ●
D1	Shaft seal (2x)	FKM	5622 050 010-051	5622 050 010-051	5622 065 010-051	5622 080 010-051	5622 100 010-051	● ● ● ●
D2	O-ring (4x)	FKM	2304 069 026-251	2304 069 026-251	2304 082 026-251	2304 098 035-251	2304 117 035-251	● ● ● ●
D3	O-ring	EPDM	2304 026 015-170	2304 026 015-170	2304 029 015-170	2304 042 020-170	2304 036 020-170	● ● ● ●
D4	Seal (2x) two-parts	FKM	5621 055 025-251	5621 055 025-251	5621 065 025-251	5621 080 025-251	5621 100 025-251	● ● ● ●
	- Support ring	AISI304L	5621 055 027-020	5621 055 027-020	5621 065 027-020	5621 080 027-020	5621 100 027-020	● - ● -
	- Form Seal	FKM	5621 055 026-251	5621 055 026-251	5621 065 026-251	5621 080 026-251	5621 100 026-251	● ● ● ●
D5	O-ring	FKM	2304 041 035-178	2304 041 035-178	2304 050 035-178	2304 066 035-051	2304 085 035-178	● ● ● ●
D6	O-ring	EPDM	2304 038 018-170	2304 038 018-170	2304 048 020-170	2304 057 020-170	2304 076 020-170	● ● ● ●
D7	O-ring	NBR	2304 042 025-055	2304 042 025-055	2304 042 025-055	2304 046 025-055	2304 046 025-055	● ● ● ●
D8	O-ring (2x)	EPDM	2304 036 035-159	2304 036 035-159	2304 036 035-159	2304 041 035-159	2304 041 035-159	● ● ● ●
D9	O-ring	EPDM	2304 047 035-159	2304 047 035-159	2304 057 035-159	2304 069 035-159	2304 092 035-159	● ● ● ●
D10a	O-ring	EPDM	2304 007 015-159					- - ● ●
D10b	O-ring	NBR	2304 009 020-055					- - ● ●

## 10 Classification

### 10.1 Structure of Order Number

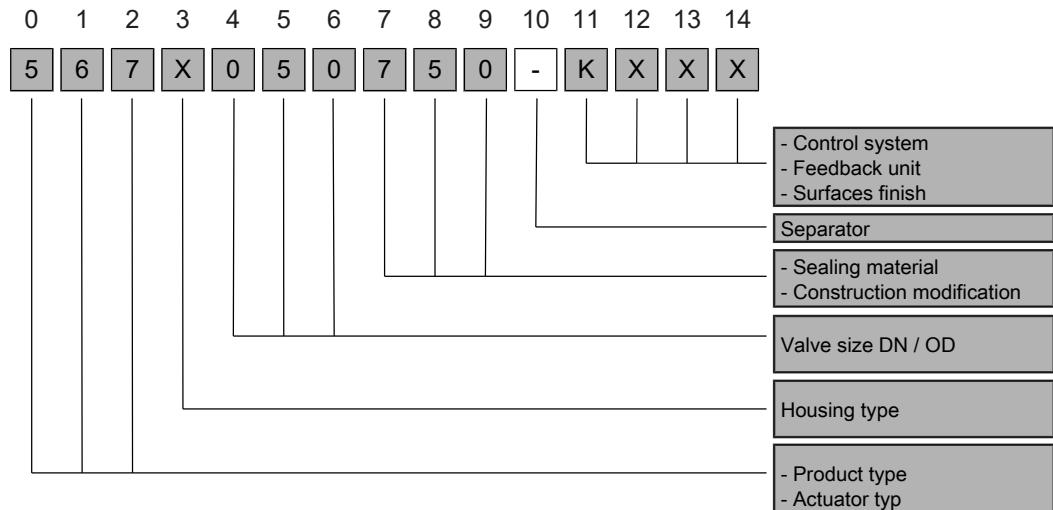

#### Product name

568 x xxx xxx-xxxx	Pos. 0	Pos. 1	Pos. 2
Double seat valve with small actuator	5	6	8

#### Housing type

xxxX xxx xxx-xxxx	Pos. 3
Housing SS - S	1
Housing S - S	2
Housing S - SS	3
Housing SS - SS	4

#### Valve size

xxxx XXX xxx-xxxx	DN	Pos. 4	Pos. 5	Pos. 6	OD	Pos. 4	Pos. 5	Pos. 6
	DN 25	0	2	5	OD 1"	0	2	6
	DN 40	0	4	0	OD 1 1/2"	0	3	8
	DN 50	0	5	0	OD 2 "	0	5	1
	DN 65	0	6	5	OD 2 1/2"	0	6	4
	DN 80	0	8	0	OD 3 "	0	7	6
	DN 100	1	0	0	OD 4 "	1	0	1
	DN 125	1	2	5	OD 5"	1	2	7
	DN 150	1	5	0	OD 6 "	1	5	2

**Material of seal / Design modification**

<b>xxxx xxx XXX -xxxx</b>	<b>Pos. 7</b>	<b>Pos. 8</b>	<b>Pos. 9</b>
EPDM	7	3	0
HNBR	7	2	0
FKM	7	4	0
EPDM - external rinsing connection upper	7	6	0
HNBR - external rinsing connection upper	7	7	0
FKM - external rinsing connection upper	7	8	0

**Separator**

<b>xxxx xxx xxx - xxxx</b>	<b>Pos. 10</b>
- KIESELMANN Valve	-

**Control system, position indicator, surfaces**

<b>xxxx xxx xxx-XXXX</b>	<b>11</b>	<b>12</b>	<b>13</b>	<b>14</b>
Valve without control system, External surface, AISI304, blank	0	2	0	
Valve without control system, External surface, AISI304, E-polished	0	2	1	
Valve without control system, External surface, AISI304, matt	0	2	2	
Valve without control system, External surface, AISI316L, blank	0	4	0	
Valve without control system, External surface, AISI316L, E-polished	0	4	1	
Valve without control system, External surface, AISI316L, matt	0	4	2	
Valve with feedback unit (5630 005 025-000)	7	5	0	
Valve with control head KI-Top SPS for double seat valves	K	5	X	X
Valve with control head KI-Top ASi-Bus for double seat valves	K	6	X	X

## 11 Appendix

### 11.1 Declaration of incorporation



#### Declaration of incorporation

Translation of the original

##### Manufacturer / authorised representative:

**KIESELMANN GmbH**

Paul-Kieselmann-Str. 4-10

75438 Knittlingen

Germany

##### Authorised representative:

(for compiling technical documents)

**Achim Kauselmann**

(Documentation / Development)

**KIESELMANN GmbH**

Paul-Kieselmann-Str. 4-10

75438 Knittlingen

Germany

<u>Product name</u>	<u>Function</u>
pneum. Lift actuators	Stroke movement
pneum. Rotary actuators	Rotary movement
Ball valves	Media cutoff
Butterfly valves	Media cutoff
Single seat valves	Media cutoff
Flow control valves	Control of liquefied media
Throttle valve	Control of liquefied media
Overflow valve	Definition of fluid pressure
Double seat valve	Media separation
Bellow valves	Sampling of liquids
Sampling valves	Sampling of liquids
Two way valves	Media cutoff
Tankdome fitting	Prevention of overpressure and vacuum, Tank cleaning
Safety valve	Prevention of overpressure

The manufacturer hereby states that the above product is considered as an incomplete machine in the sense defined in the Directive 2006/42/EC on Machinery. The above product is exclusively intended to be installed into a machine or an incomplete machine. The said product does not yet conform to all the relevant requirements defined in the Directive on Machinery referred to above for this reason.

The specific technical documents listed in Appendix VII, Part B, have been prepared. The Authorized Agent empowered to compile technical documents may submit the relevant documents if such a request has been properly justified.

Commissioning of an incomplete machine must not only carried out if it has been determined that the respective machine into which the incomplete machine is to be installed conforms to the regulations set out in the Directive on Machinery referred to above.

The above product conforms to the requirements of the directives and harmonized standards specified below:

- Directive 2014/68/EU
- DIN EN ISO 12100 Safety of machinery

Knittlingen, 21.09.2017

i.V. Uwe Heisswolf  
Head of Development

**KIESELMANN**  
FLUID PROCESS GROUP