

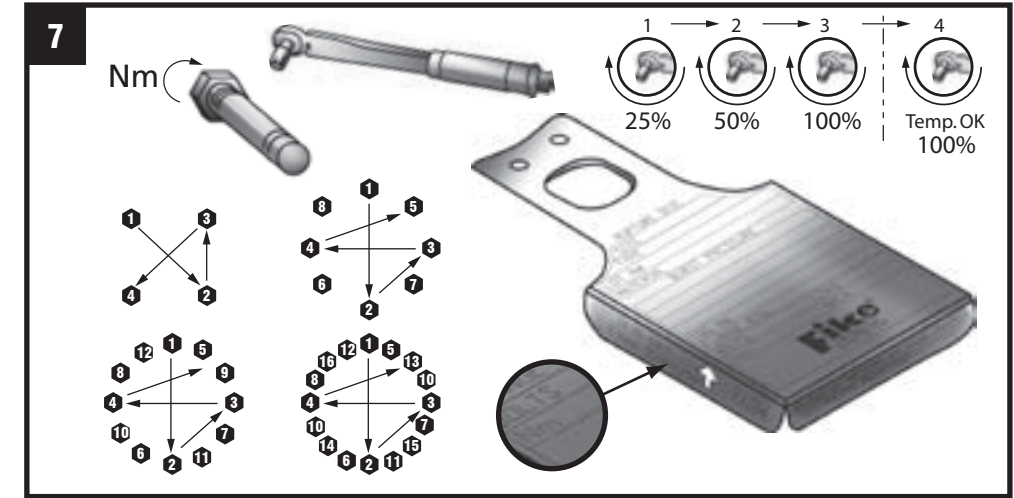
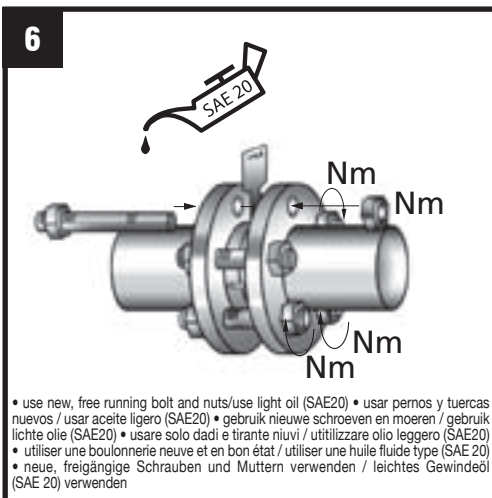
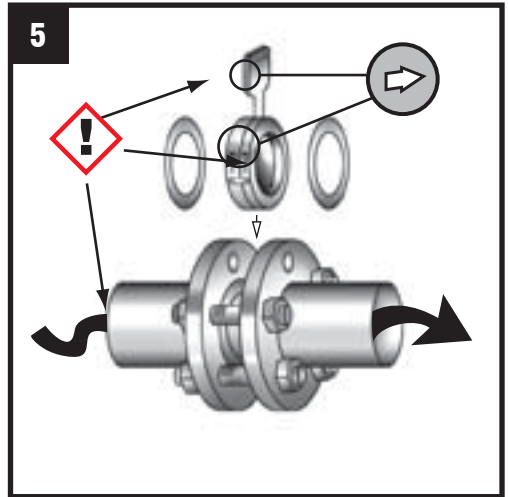
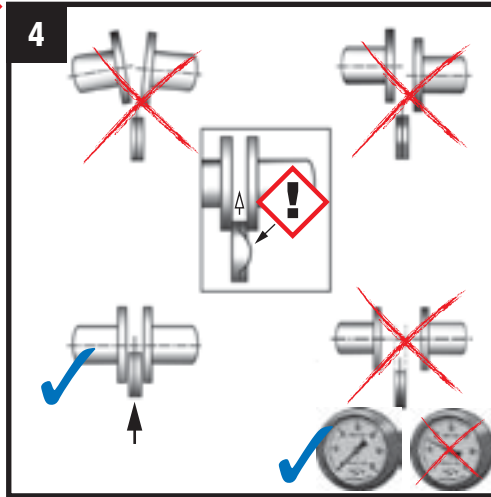
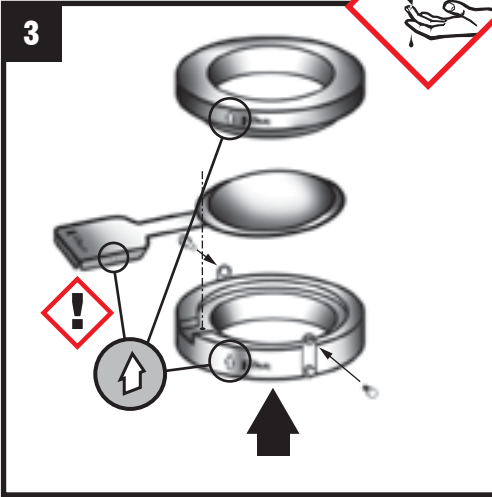


# INSTALL - INSTALLARE - INSTALLEREN - INSTALLER - INSTALAR - INSTALLIEREN

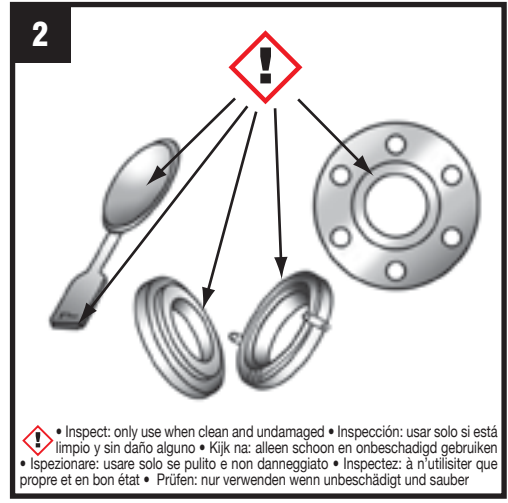

AXIUS HO/HOV  
Poly-SD P Series  
SCRD SRX  
SCRD-FSR SRL

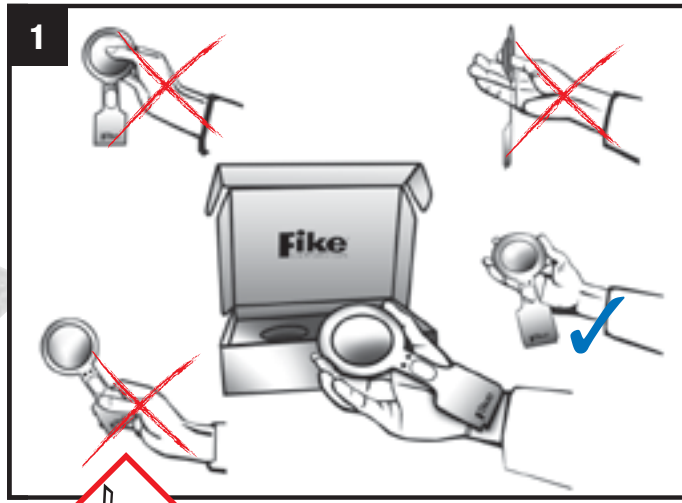

# REPLACE - SOSTITUIRE - VERVANGEN - REMPLACER - CAMBIAR - ERSETZEN

