

How to change the unit value on the CALEC ST II:

◀↵ = Enter


▼ = Down

Starting position display:

Press ▶↵ = Enter



▶↵ = Enter

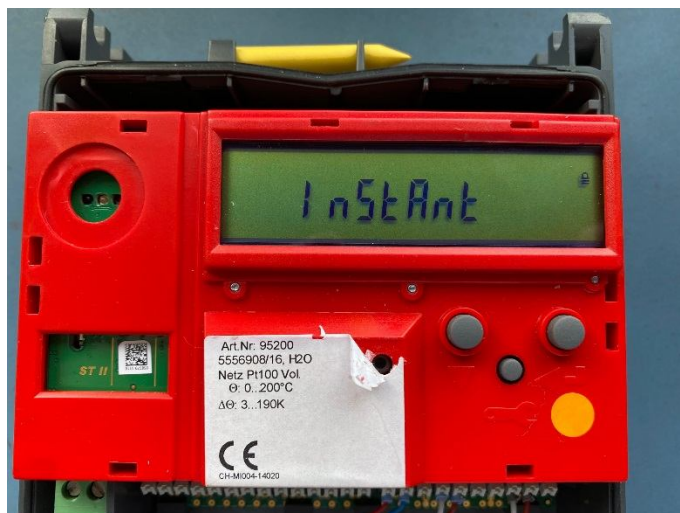

◀ = Enter




◀ = Enter




◀ = Enter



◀ = Enter

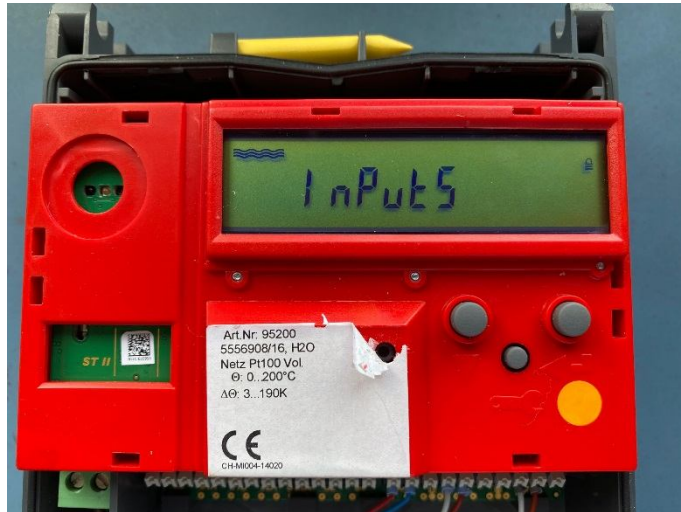

◀ = Enter

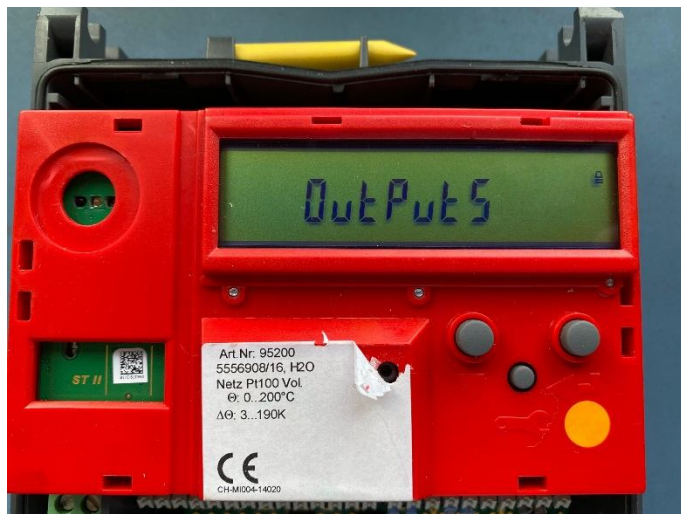

◀ = Enter



◀↵ = Enter



◀↵ = Enter

Finally, you get to the menu “UnitS”
This is where you will change the unit value.

Inside this menu press ◀↵ = Enter



The press ▼ = Down until you get the letter “P” = power on the left side of the display.




Now pierce the button hidden under the front foil as shown on the picture below.
This will remove the lock shown on the upper right side of the display.

Press ◀↵ = Enter and you will see the “Edit” sign on the left upper side of display.



The Lock will disappear and by pressing the ◀↵ = Enter button you will see the Edit sign.

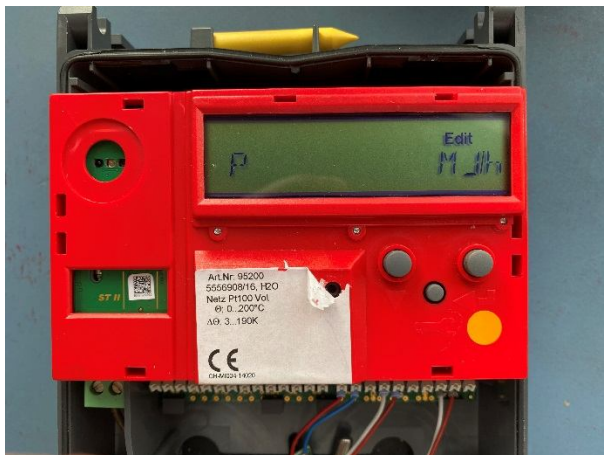

Now press ▼ = Down unit you get the value you need such as MJ



Once you have the required value, press ◀↵ = Enter to finish. Now you can unplug the unit and re-plug it again in order to keep the last settings.