

ESK4... ..

Supplementary Instructions

Electronic signal output

Equipment category II 2G, EPL Gb



1	Safety instructions	3
1.1	General notes	3
1.2	EU conformity	3
1.3	Approval according to the IECEx scheme	3
1.4	Safety instructions.....	4
2	Device description	5
2.1	Description of device	5
2.2	Description code	5
2.3	Marking	5
2.4	Equipment category	7
2.5	Types of protection	7
2.6	Ambient temperature / temperature classes.....	7
2.7	Electrical data.....	8
3	Installation	9
3.1	Mounting	9
3.2	Special conditions.....	9
4	Electrical connections	10
4.1	General notes	10
4.2	Power supply	10
4.3	Internal connections.....	10
5	Operation	11
5.1	Start-up.....	11
5.2	Operation	11
6	Service	12
6.1	Maintenance	12
6.2	Dismantling	12
7	Notes	13

1.1 General notes

These additional instructions apply to explosion-protected versions of the ESK4... electronic signal output with the designation II 2 G. They complete the standard manual for the non-explosion protected versions.

The information given in these instructions contains only the data relevant to category 2 explosion protection. The technical details given in the standard documentation for the non-explosion protected versions apply unchanged unless excluded or superseded by these instructions.

1.2 EU conformity

The manufacturer declares with the EU declaration of conformity on his own responsibility conformity with the protection goals of directive 2014/34/EU for use in hazardous areas with gas. Conformity with harmonised standards was checked in accordance with EN 60079-0:2012 + A11:2013 and EN 60079-11:2012.

The EU declaration of conformity is based on the EC type examination certificate of the Physikalisch Technische Bundesanstalt (PTB):

PTB 10 ATEX 2021 X

The "X" after the certificate number refers to special conditions for safe use of the device, which have been listed in these instructions.

If needed the EC type examination certificate can be downloaded from the manufacturer's website.

1.3 Approval according to the IECEx scheme

Conformity for use in hazardous areas with gas and dust was tested in accordance with the "IECEx Certification Scheme for Explosive Atmospheres" according to IEC 60079-0:2011 and IEC 60079-11:2011.

The number of the IECEx certificate is:

IECEx PTB 17.0033 X

The "X" after the certificate number refers to special conditions for safe use of the device, which have been listed in these instructions.

If needed, the IEC certificate can be downloaded from the manufacturer's website.

1.4 Safety instructions

Assembly, installation, start-up and maintenance may only be performed by personnel trained in explosion protection!



CAUTION!

The operator or his agent is responsible for observing any additional standards, directives or laws if required due to operating conditions or place of installation.

2.1 Description of device

ESK4...electronic signal outputs serve to determine the position of magnetic encoders. They are designed for installation in M40 type indicators and are usually used in measuring devices to measure the volume flow and level of flammable and non-flammable gases and liquids.

The analogue current signal (4...20 mA) with superimposed HART® communication signal and optional switching outputs and bus connection modules for connection to the Foundation Fieldbus FF or Profibus PA is available as an output signal.

2.2 Description code

The safety description code consists of the following elements *:

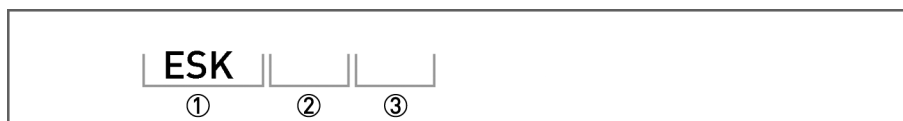


Figure 2-1: Description of the safety description code

- ① Electronic **S**ignal output **K**rohne
- ② Version of the signal output
 - 4.** - 4...20 mA analogue signal output with HART® signal
 - 4-I/O** - Switching output with counter
 - 4-FF** - Foundation Fieldbus connection module
 - 4-PA** - Profibus PA connection module
- ③ Marking without influence on the explosion safety protection

2.3 Marking

The marking of the module is on the housing, where the following identification plate can be found.



Figure 2-2: Example of a nameplate for a standard version

- ① Type designation, manufacturing date and production order
- ② Ex data according to PTB 10 ATEX 2021 X or IECEx PTB 17.0033 X
- ③ Manufacturer logo and address
- ④ Notified body
- ⑤ Note to observe the documentation and for disposal
- ⑥ Note on electrostatic charge

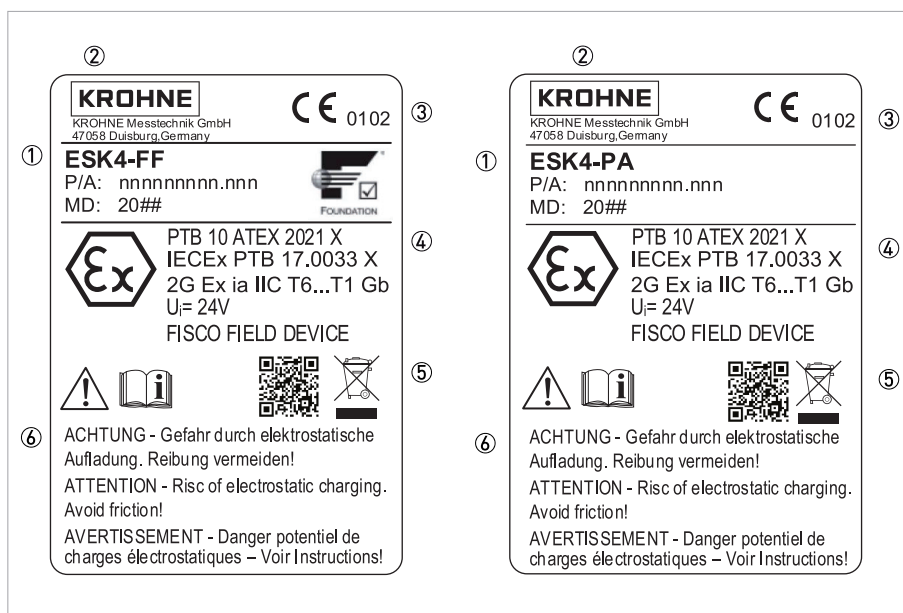


Figure 2-3: Example of nameplates for FF and Profibus PA versions

- ① Type designation, manufacturing date and production order
- ② Manufacturer logo and address
- ③ Notified body
- ④ Ex data according to PTB 10 ATEX 2021 X or IECEx PTB 17.0033 X
- ⑤ Note to observe the documentation and for disposal
- ⑥ Note on electrostatic charge



Figure 2-4: Example of nameplate for a version with I/O

- ① Type designation, manufacturing date and production order
- ② Manufacturer logo and address
- ③ Notified body
- ④ Ex data according to PTB 10 ATEX 2021 X or IECEx PTB 17.0033 X
- ⑤ Note to observe the documentation and for disposal
- ⑥ Note on electrostatic charge

2.4 Equipment category

The electronic signal outputs are designed in category II 2G or EPL Gb according to EN 60079-0 and EN 60079-11 for use in zone 1.

2.5 Types of protection

The electronic signal output is designed with protection type intrinsic safety, protection level "ia" according to EN 60079-11.

The marking is: **II 2G Ex ia IIC T6 Gb**

The marking contains the following information:	
II	Explosion protection, group II
2	Equipment category 2
G	Gas explosion protection
Ex ia	Intrinsically safe, protection level "ia"
IIC	Suitable for gas group IIC, IIB and IIA
T6	Suitable for temperature class T6...T1
Gb	EPL, suitable for zone 1

2.6 Ambient temperature / temperature classes

Depending on the version and the temperature class, the electronic signal outputs are approved for the following ambient temperatures.

Permissible ambient temperatures for ESK4... ..

Type of signal output	Temperature class	Ambient temperature in	
		[°C]	[°F]
ESK4 ... ESK4-I/O	T6	-40...+60	-40...+140
	T5	-40...+75	-40...+167
	T4...T1	-40...+85	-40...+185
ESK4-FF ESK4-PA	T6	-40...+55	-40...+131
	T5	-40...+70	-40...+158
	T4...T1	-40...+85	-40...+185

2.7 Electrical data

The connection may only be made using separately certified intrinsically safe isolating amplifiers or zener barriers with the following maximum values per circuit:

Electrical values for ESK4... ..

Type of signal output	Terminals	Maximum value per intrinsically safe circuit				
		U_i	I_i	P_i	C_i	L_i
ESK4...	11, 12	30 V	130 mA	1 W	0 nF	10 μ H
ESK4-I/O	1, 2, 3 or 4, 5, 6 or 7, 8	30 V	130 mA	1 W	10 nF	0 μ H
ESK4-FF / ESK4-PA	D, D-	24 V	380 mA	5.32W	0 nF	0 μ H
		FISCO FIELD DEVICE				

The connector behind the cutout on the ESK4... module cover connects internal intrinsically safe circuits. Only certified modules of type ESK4-I/O, ESK4-FF or ESK4-PA may be connected. The additional connector on the ESK4-I/O module connects the optional display as an internal intrinsically safe circuit.

3.1 Mounting

Mounting and setup must be carried out according to the applicable installation standards (e.g. EN 60079-14) by qualified personnel trained in explosion protection. The information given in the manual and the supplementary instructions must always be observed.

Install electronic signal outputs so that

- no external forces are affecting the housing.
- the nameplate is clearly visible.
- it can be operated from a location with secure footing.



CAUTION!

The manufacturer is not liable for any damage resulting from improper use or use other than the intended purpose.

3.2 Special conditions

Housing protection

Electronic signal outputs are to be protected against external influences by a housing (minimum IP20).

Electrostatic charge

The plastic housing of the electronic signal output may be electrostatically charged. Take appropriate measures to ensure that no charge is applied to the surface of the housing during installation and operation.

ESK4-FF and ESK4-PA connection

When operating the ESK4-FF or ESK4-PA module for connection to intrinsically safe bus systems, the ESK4... module may not be powered separately. The ESK4... module is fed by the flat ribbon cable from the modules ESK4-FF or ESK4-PA.

4.1 General notes

The electrical connection of the intrinsically safe signal circuit with protection level "ia" to the modules ESK4... , ESK4-FF and ESK4-PA is independent of polarity.

The connection of the ESK4-I/O module is polarity sensitive.

The connection to all modules is made by colour-coded pluggable connection terminals. The colour coding of the terminals must be observed. The permissible maximum values of the separate circuits (electrical data) must be observed.

The connecting cables must be selected according to prevailing installation standards (e.g. EN 60079-14). The connecting cables must be fixed and laid so they are sufficiently protected against damage.

All cores that are not used must be securely connected to the ground potential of the hazardous area or carefully insulated against each other and against ground (test voltage $\geq 500 V_{eff}$).

4.2 Power supply

Electronic signal outputs do not require a separate power supply. The required supply is provided via the 4...20 mA current output or bus-connection.

4.3 Internal connections

All modules should be connected internally using the ribbon cables provided. These are non-interchangeable and protected against reverse polarity.

5.1 Start-up

Start-up is only permitted when the electronic signal output:

- is correctly installed in a housing and connected.
- has been checked for the proper state with regard to its installation and connection requirements.

The user of the system must have it checked before start-up in compliance with the national regulations for checks before startup.

5.2 Operation

All modules may be parameterized via the HART® communication and the switches or keys may be operated during operation.

6.1 Maintenance

Maintenance work of a safety-relevant nature within the meaning of explosion protection may only be carried out by the manufacturer, his authorised representative or under the supervision of authorised inspectors.

For systems in hazardous areas, regular tests are required in order to maintain the proper condition.

The following checks are recommended:

- Check the housing, connection terminals and feed lines for corrosion and/or damage.

Close the housing following any maintenance work on the electronic signal output.

6.2 Dismantling

Replacing the electronic signal output

Due to the modular design of the electronic signal output, from a safety perspective it is possible to replace a module with an identical spare part.

Exchanging and dismantling should take place in a de-energised state, if at all possible. If this is not possible, the basic conditions for intrinsic safety (e.g. no grounding or connection of different intrinsically safe circuits to one another) must be observed during dismantling.

The dismantling and installation is within the responsibility of the operator.



CAUTION!

There may be a risk of losing measuring accuracy!









KROHNE – Process instrumentation and measurement solutions

- Flow
- Level
- Temperature
- Pressure
- Process Analysis
- Services

Head Office KROHNE Messtechnik GmbH
Ludwig-Krohne-Str. 5
47058 Duisburg (Germany)
Tel.: +49 203 301 0
Fax: +49 203 301 10389
info@krohne.com

The current list of all KROHNE contacts and addresses can be found at:
www.krohne.com

KROHNE